




Compressed Air Systems



Pneumatic Rotary Screw Inlet Valve Cleaning

972-352-6304/800-531-9656

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE

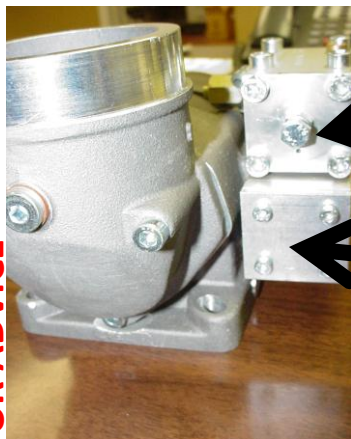


Pressure adjusting screw

Inlet control Piston area



Inlet valve Control piston

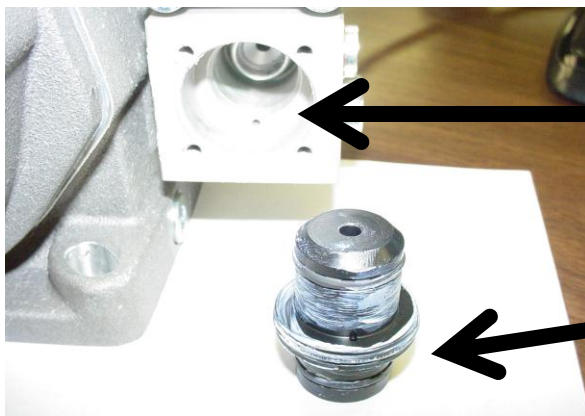

Inlet valve control Piston cylinder

Inlet control piston
With coating of
white Lithium
grease

www.compressed-air-systems.com

If the unit runs but will not build pressure it can be caused by a inlet piston that is frozen and can not move freely.
Every 3 months remove the piston and clean . Clean the cylinder. Put a light coating of white lithium grease on piston
And cylinder. Reassemble and check for proper operation.