



# Compressed Air Systems



## How to replace an airend shaft seal

972-352-6304/800-531-9656

### Replacement of the shaft sealing (for compact units and airends)



Remove the feather key



Unscrew and remove the front cover



ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY  
AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE



# Compressed Air Systems



## How to replace an airend shaft seal

972-352-6304/800-531-9656

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE



Take off the inner ring with an extracor



Heat up the new inner ring to 100°C and put silicon glue on the shaft





# Compressed Air Systems



## How to replace an airend shaft seal

972-352-6304/800-531-9656

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE



Hammer the inner ring on the shaft



Remove the worn shaft seal, put silicon glue on the cleaned front cover and press in the new shaft seal





# Compressed Air Systems



## How to replace an airend shaft seal

972-352-6304/800-531-9656

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE



Put the mounting sleeve on the shaft, shove the frontcover with the greased o-ring carefully on the shaft and screw it in place.



Shaft sealing maintenance kit

