
# www.compressed-air-systems.com

### ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE

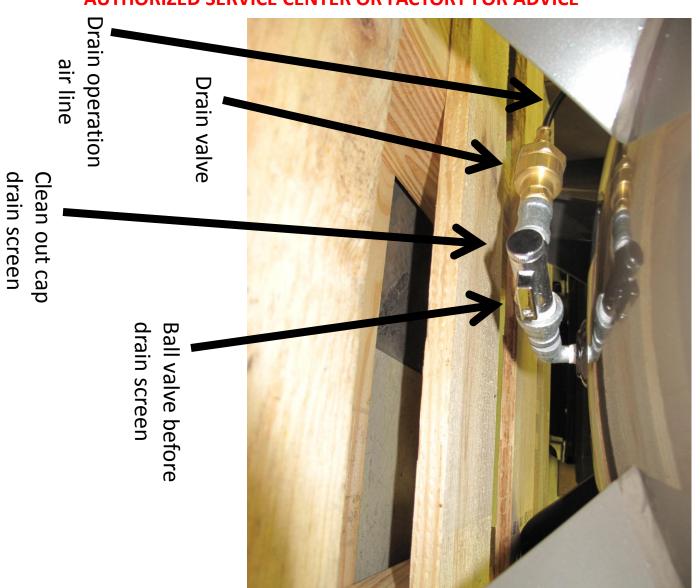

### Cleaning out pneumatic auto tank drain NRASSAd AIr Systt

972-352-6304/800-531-9656





### ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY **AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE**




## Cleaning out pneumatic auto tank drain

972-352-6304/800-531-9656



clean out cap Remove drain

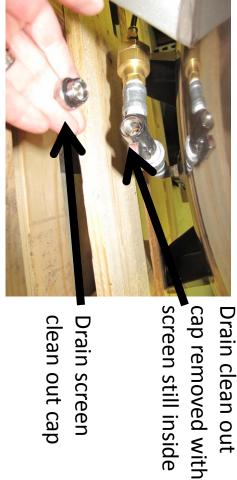

clean out cap Drain screen



Once no debris is visible Drain screen removed was until

### ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE



## NNTASSAI AIr Sysji

Cleaning out pneumatic auto tank drain



972-352-6304/800-531-9656



Note: Before this step make sure that you are not looking directly at drain opening air pressure and debris will come out of opening

With drain screen removed open ball valve to ensure drain is open and drained.



Once drain is clean, put screen, cap back in clean out and tighten cap