
www.compressed-air-systems.com


ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY **AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE**



Replacing Centrifugal Unloader Elbow

972-352-6304/800-531-9656

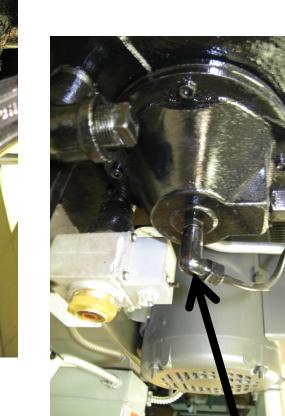

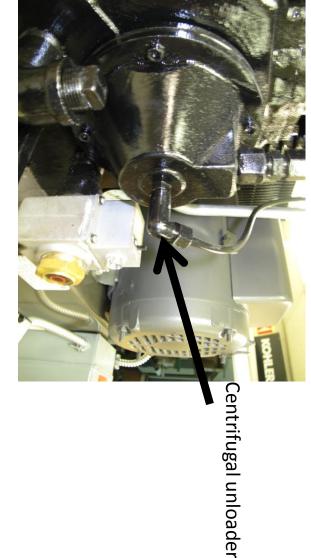

Remove air line from unloader elbow.

INIT SYSU

Replacing Centrifugal Unloader Elbow

972-352-6304/800-531-9656




Unloader air line removed



ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY

Remove old unloader elbow

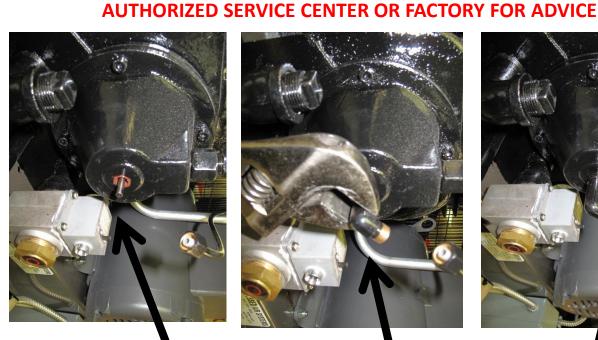


visible in stationary position. Unloader elbow removed. Centrifugal unloader pin

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY **AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE**



HUIIIDI'OSSOA AII' SYSLL Replacing Centrifugal Unloader Elbow

972-352-6304/800-531-9656

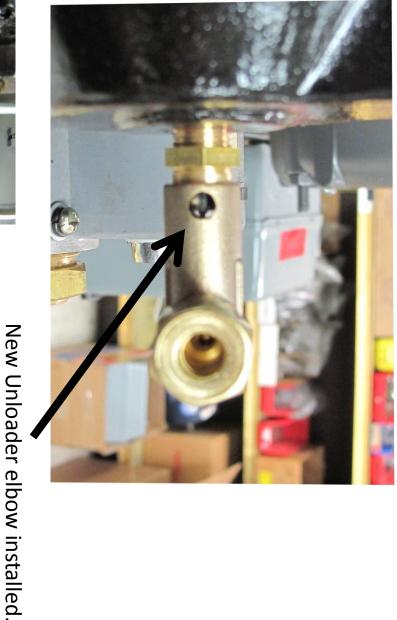



against unloader cone Lock nut installed

in stationary position.

depressing elbow pin 1/8 inch

Centrifugal unloader pin

www.compressed-air-systems.com

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY AUTHORIZED SERVICE CENTER OR FACTORY FOR ADVICE



HUMDTOSSOU AIT SYSLE Replacing Centrifugal Unloader Elbow

972-352-6304/800-531-9656



New unloader elbow installed in proper position with unloader line installed

