



1 Phase Piston Compressor Wiring Diagram

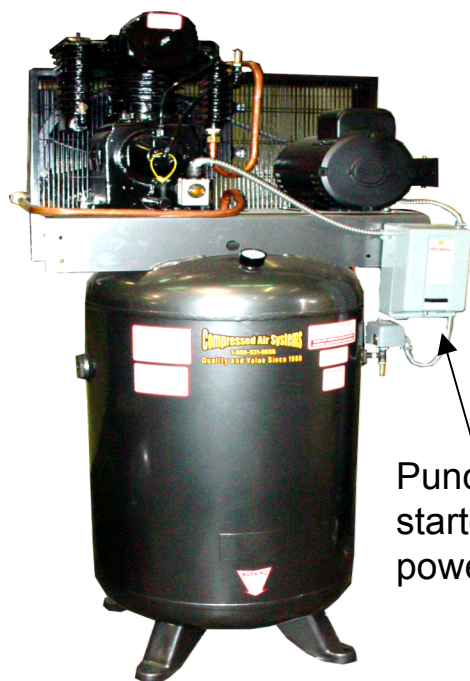

Punch hole in starter box for power inlet.

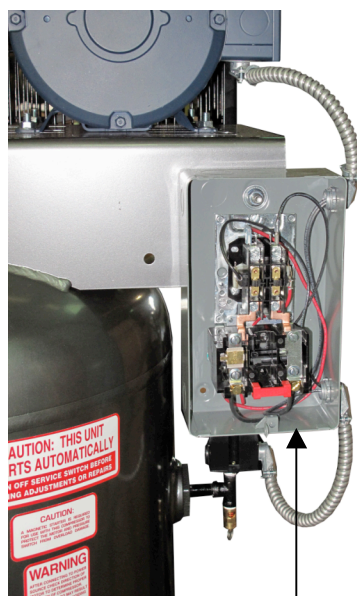


Remove starter lid cover

Place ground wire behind washer for a proper ground

Place 1 of the incoming power lines under the starter screw shown

Place the other incoming power line under the starter screw shown

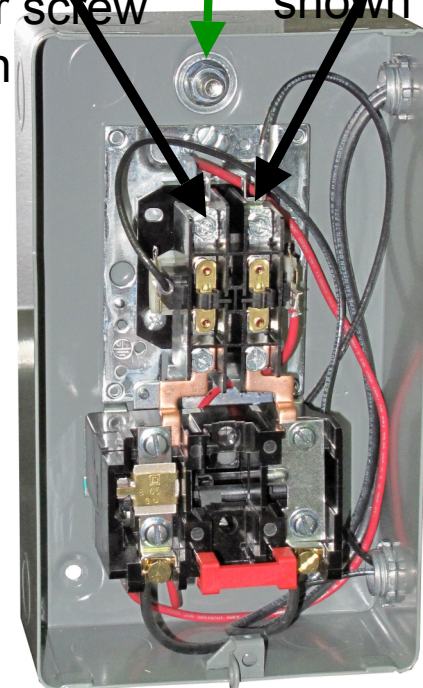

Once the steps are complete make sure all connections are tight and place starter cover back on the box, before turning the machine on.

ALL WAY MAKE SURE POWER IS OFF BEFORE WIRING COMPRESSOR